



Air Tube User Guide

This guide has been written to help you get the most from your Air tube. Please ensure that you read this fully as it contains important information on filling, emptying and maintaining your tube. Failure to follow this advice may result in damage to the tube and invalidate your warranty.

Keep this guide in a safe place for future reference.

Apollo
Creative ●●●●
Manufacturers of Sensory Products

Contents

Unpacking	4
Setting up	5
Anti Static Spray for Air Tube	6
Potential risks & warnings	7
Contact details	8

Unpacking

1. Air tubes are shipped in specialist packaging, designed to protect the tube from damage during transport.
2. Ensure that the packaging is carefully removed from around the tube. Keep the packaging in case the tube needs to be returned.
3. Take care not to lift by the tube as this can cause damage. Always lift from the base.
4. The power supply for the tube is stored in the top cardboard packing piece.
5. If you find any damage when you unpack you should report it within **7 days** to your supplier.
6. Do not remove the protective film from the tube until the unit has been filled with water and is running to your satisfaction.

Setting up

1. Ensure that the power supply is sited at an adequate distance from the tube and that there is no tension in the power cable. The cable should never be coiled around the power supply, as this may cause it to overheat.
2. Align the 3-pronged centre tube to the stickers that you see placed on the outside of the plastic film. This is to ensure the air flow is correct as it flows up the centre tube to give it the right effect.
3. Pour the beads that have been supplied into the tube. Note that these may clump together and stick to the inside of the tube, this is normal and is caused by static. Turn on the air tube and leave this running for a couple of hours. This will help the beads to come away from the interior of the tube and flow correctly.
4. **ENSURE THE LID IS CLOSED PROPERLY BEFORE TURNING THE TUBE ON. This will ensure the beads don't escape from the tube.**
5. In the unlikely event of the tube not working fully, please contact your supplier.

Anti static Spray for Air Tube

1. Make sure the air tube is switched off so that the beads are at the bottom of the acrylic tube.
2. Remove top lid from the acrylic tube.
3. Spray the anti static spray directly into the inner tube and outer tube. We recommend 2-3 sprays, but do as you wish.
4. Place top lid back onto the acrylic tube.
5. Turn on the air tube, you will find that beads will stick. Leave the air tube running for 30 minutes to let the beads dry out.

Potential risks & warnings

1. Read and understand all these instructions before using the Air tube.
2. Do not operate the tube with a damaged power cord, or if the unit has been dropped or damaged.
3. Position the power cord so that it will not be tripped over, pulled or come into contact with hot surfaces.
4. If an extension lead is necessary, a cable with a current rating at least equal to that of the tube (3.5A) should be used.
5. Always unplug the tube from the power socket before cleaning, servicing and when not in use. Never yank the cord to pull the plug from the outlet. Grasp the plug and pull to disconnect.
6. Always connect the air tube to a grounded outlet.
7. To reduce the risk of electrical shock, do not immerse the product in water or other liquids.
8. Do not dismantle the tube, but contact the supplier or manufacturer if servicing is required. Incorrect assembly can cause electrical shock when the product is used.

This air tube is supplied by:



Manufactured by:

Apollo Creative
Knaresborough Technology Park
Manse Lane
Knaresborough
North Yorkshire
HG5 8LF

T: 01423 798232

E: sales@apollocreative.co.uk

W: www.apollocreative.co.uk