

Chroma+ Tube User Guide

This guide has been written to help you get the most from your Chroma+ tube. Please ensure that you read this fully as it contains important information about your new Chroma+ tube. Failure to follow this advice may result in damage to the tube and invalidate your warranty.

Keep this guide in a safe place for future reference.

Unpacking

1. Chroma+ tubes are shipped in specialist packaging, designed to protect the tube from damage during transport.
2. Ensure that the packaging is carefully removed from around the tube. Keep the packaging in case the tube needs to be returned.
3. Take care not to lift by the tube as this can cause damage. Always lift from the base.
4. The power supply for the tube is stored in the top cardboard packing piece. You will also find the Chroma+ tube lid packed at the base.
5. If you find any damage when you unpack you should report it within **7 days** to your supplier.

Setting up

1. The power supply will be attached to the base of the Chroma+. Please remove this and ensure that the power supply is sited at an adequate distance from the tube and that there is no tension in the power cable. The cable should never be coiled around the power supply, as this may cause it to overheat.
2. When you're happy with the placement of your Chroma+ place the white base cover over the tube.
3. In the unlikely event of the tube not working fully, please contact your supplier.

Potential risks & warnings

1. Read and understand all these instructions before using the Chroma+ tube.
2. Do not operate the tube with a damaged power cord, or if the unit has been dropped or damaged.
3. Position the power cord so that it will not be tripped over, pulled or come into contact with hot surfaces.
4. If an extension lead is necessary, a cable with a current rating at least equal to that of the tube (3.5A) should be used.
5. Always unplug the tube from the power socket before cleaning, servicing and when not in use. Never yank the cord to pull the plug from the outlet. Grasp the plug and pull to disconnect.
6. Always connect the Chroma+ tube to a grounded outlet.
7. To reduce the risk of electrical shock, do not immerse the product in water or other liquids.
8. Do not dismantle the tube, but contact the supplier or manufacturer if servicing is required. Incorrect assembly can cause electrical shock when the product is used.



Manufactured by:

Apollo Creative
Knaresborough Technology Park
Manse Lane
Knaresborough
North Yorkshire
HG5 8LF

T: 01423 798232

E: sales@apollocreative.co.uk

W: www.apollocreative.co.uk

Version	Date	Author	Checked	Summary of changes
A	28/5/19	JA	CM	Re-wording of 'Setting Up'